


# SpacePole Solo™ For Verifone E355

## Installation Guide

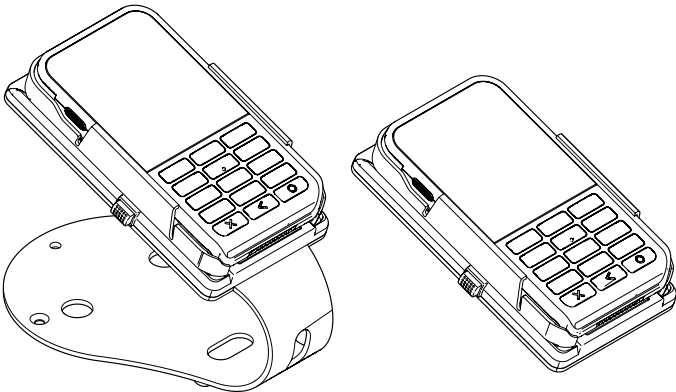


MK15-0261 version 1.0 09/2018


### Cable routing options




Other cable routing can be used as necessary. No cable shearing/cutting allowed.

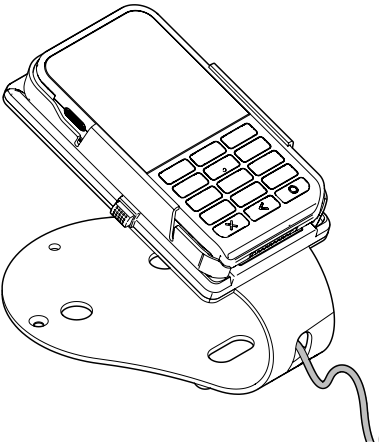

#1: Front

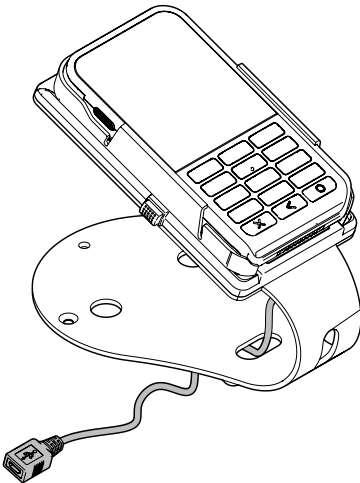


#2: Under

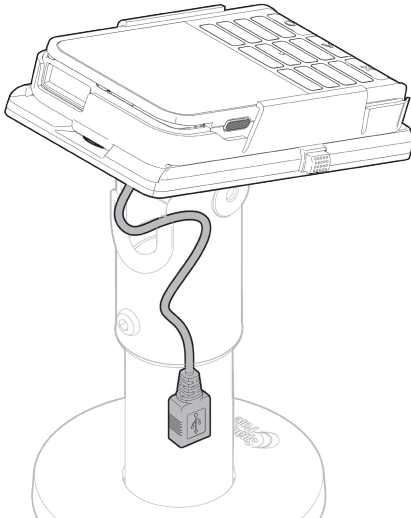


#3: DuraTilt™

### Verifone E355 M-Case use

Insert

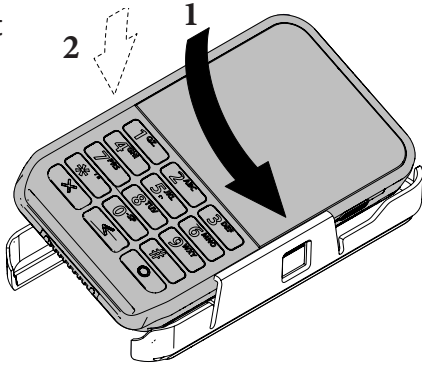


Remove

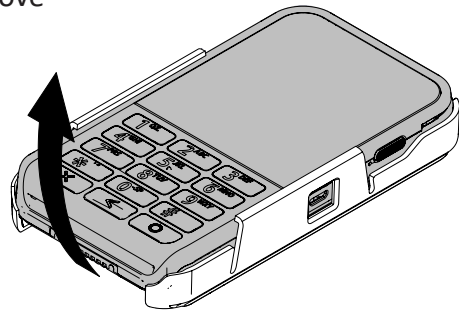


### SpacePole Solo™ use

#### 1 MultiGrip™ mounting

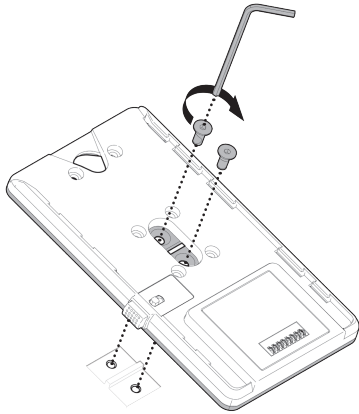


#### Inserting Verifone E355 M-Case

2

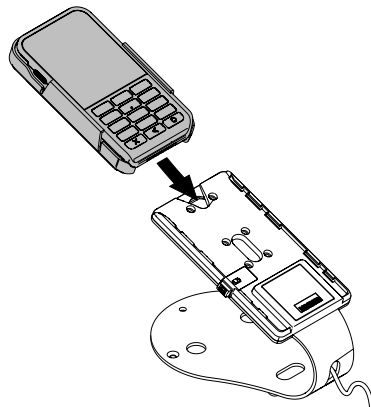

Power inlet

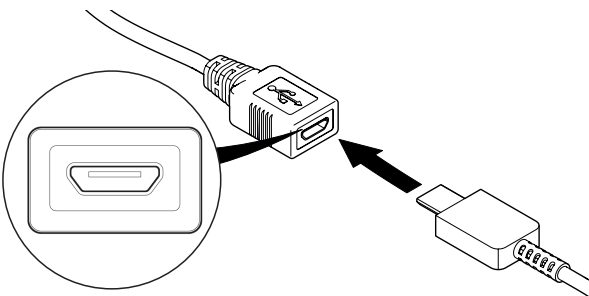


Micro USB


DC 5V/2.1A

#### Removing Verifone E355 M-Case


3

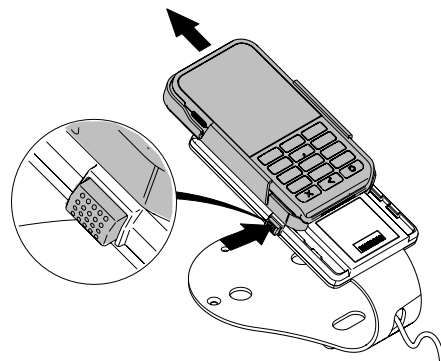

### SpacePole Solo™ security

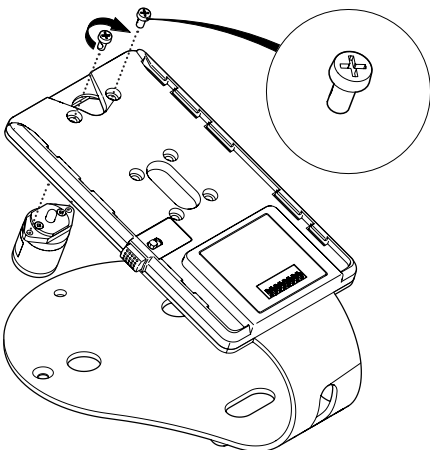

Screws are not included.

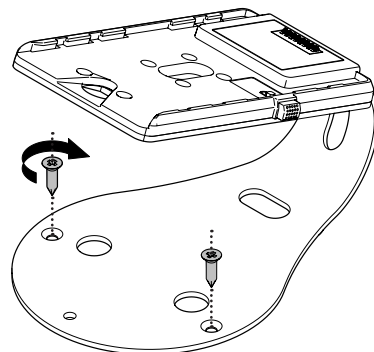

Get more information at: [ergonomic.solutions](http://ergonomic.solutions)