
Installation Guide

SPM149 Adjustable floor stand for screens up to 43" (max VESA 200 / max weight 11kg)





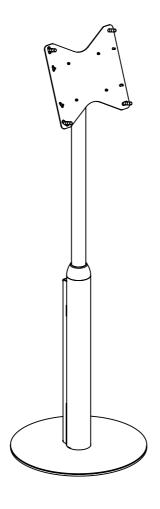

- This product is intended for indoor use only.
- The maximum compatible screen size is 43" and the weight limit for this product is 11 kg. Do not exceed the stated screen size nor the weight limit.
- Take special care to avoid injury when releasing the hand screws, as the top pole will come down, if not held in place.
- Floor mounting of the Floor stand is required. When anchoring the Floor stand make sure to use an appropriate anchoring solution for the specific installation site.
- If these installation instructions are not followed correctly, it could lead to product failure and potential personal injury.
- Ergonomic Solutions/SpacePole inc. cannot be held responsible for any failure or injury, if the installation instructions are not followed correctly.


Tool list











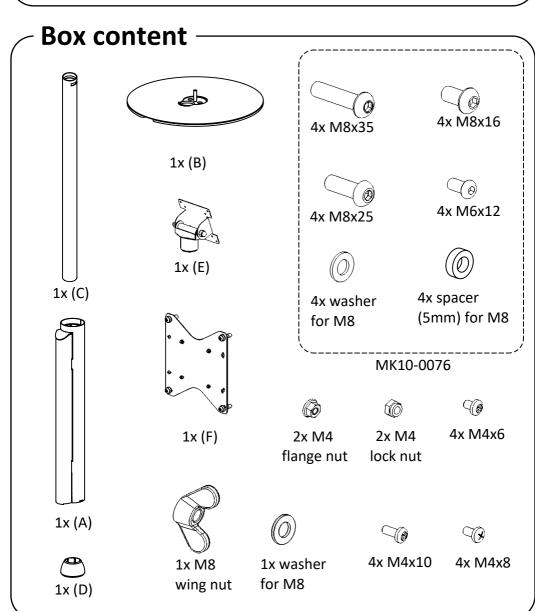


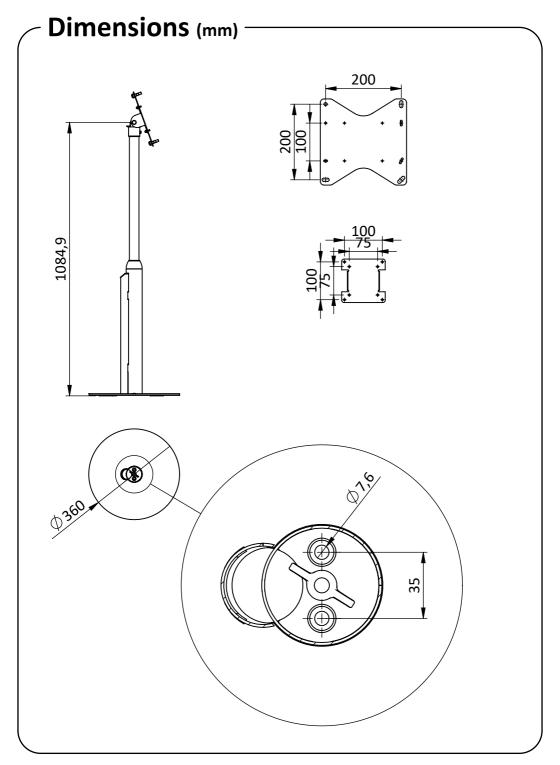

Step 1: Remove cover, from (A) - magnetically held in place

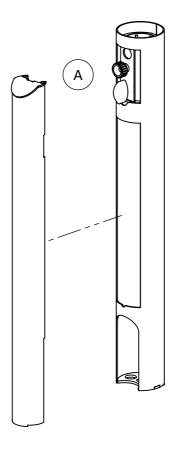


Step 2: Secure base (B) and place base pole (A)

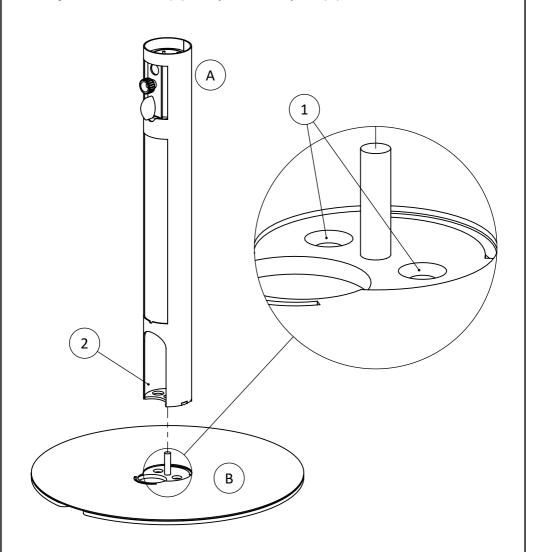


- Secure base to the floor using the countersunk holes (fixings are not provided).
- (2) Place (A) on base (B), align the holes.

Step 3: Secure base pole (A)

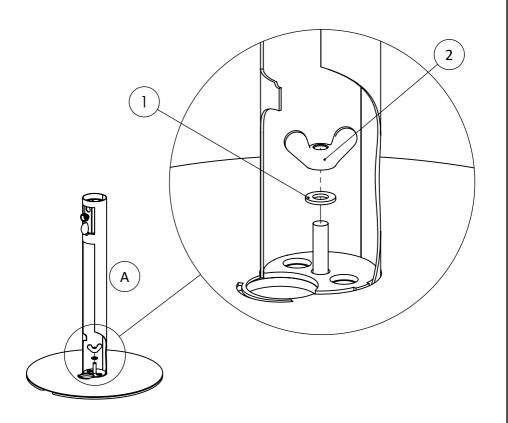


- (1) Place M8 washer.
- (2) Tighten the M8 wing nut by hand.

Step 4: Mount Pole (C) inside the base pole (A)

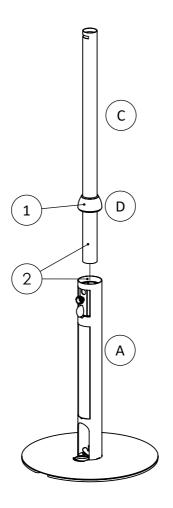


- $\left(\begin{array}{c} \mathsf{l} \end{array}
 ight)$ Place aluminium element (D) over the pole
- (2) Insert pole in the base


Step 5: Adjust the pole (C) to the desired height and secure

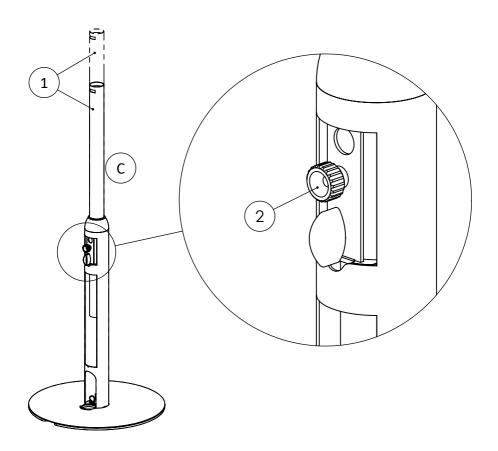

- (1) Place the pole at the desired height.
- $\left(\,2\,
 ight)$ Fix in position using the hand screws

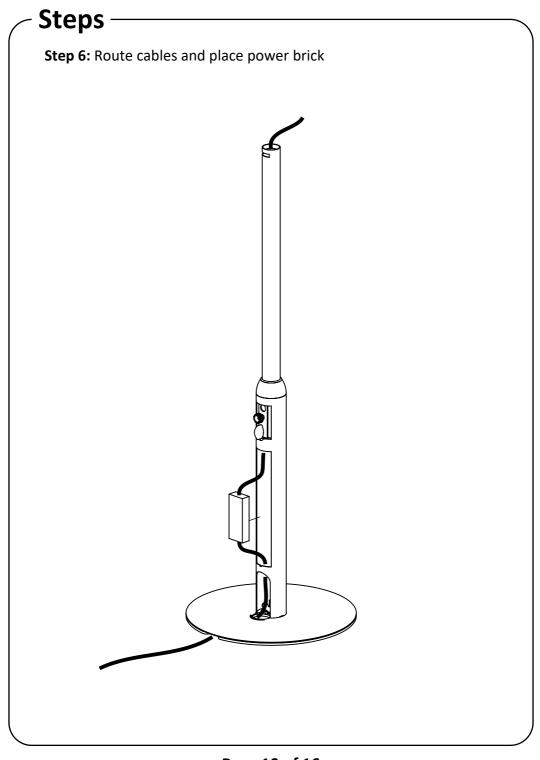

Step 7: Mount screen

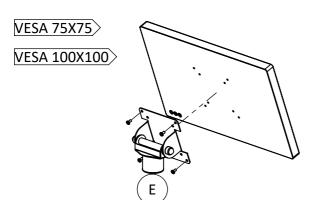

Choose the appropriate length of screws for the screen!


VESA 200X200


VESA 100X200


- 1 Attach adapter (F) to (E) using the 4x M4 nuts
- 2 Attach screen to (F)

Steps Step 8: Mount VESA adapter and screen on to the floor stand

Step 9: Place cover, magnetically attached

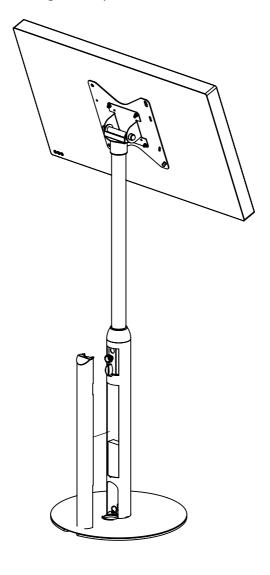

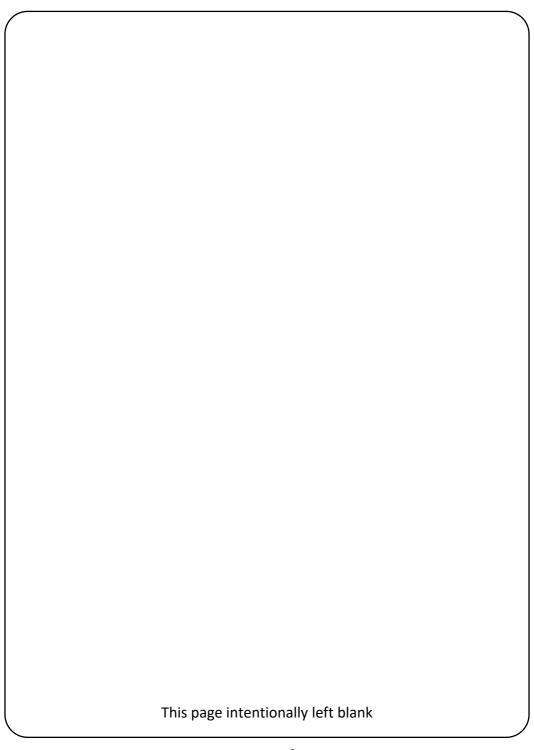

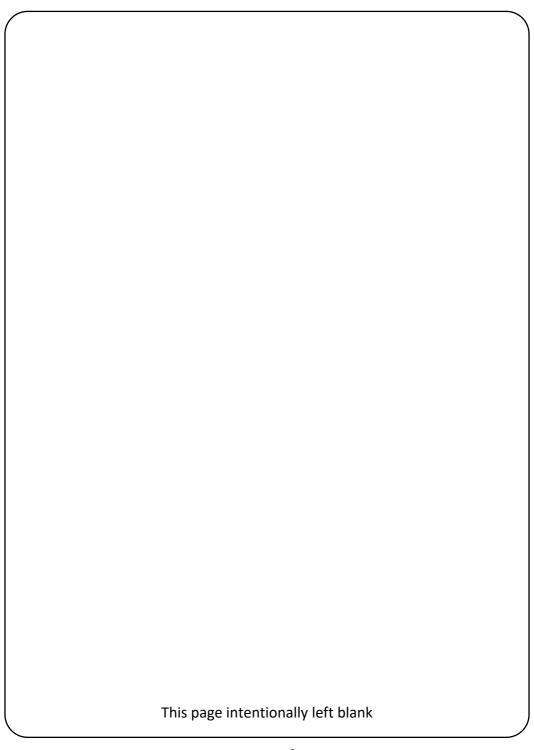

- Need help? Contact us

ergonomic*
Spacepole*
an ergonomic solutions company

ergonomic.solutions/about/contact-us

spacepole.com/about/contact-us